



Tech Tips

TT 17-06-100

Date: 2006

Vehicles with 2.0L FSI Turbo (BPY) and All 2.5L Engines, Oil Filter Cartridge Replacing

Jan 02, 2007 - UPDATED

When changing the oil filter and installing a new filter seal in the oil filter housing, special attention is required. After removing the oil filter housing, be sure to remove the old seal and thoroughly clean the filter housing seal groove. Place the new seal (after oiling it) with the half moon tab pointing upward in the canister (toward the block). Please note that this seal can be installed inside out which MUST be avoided. The PROPER position has the convex side of the seal facing outward with the vertical slot facing the inside (see the photo). After properly inserting the new cartridge into the plastic housing, torque the assembly to 25Nm.

